



User Manual

TP200 Type K Pipe Clamp Temperature Probe

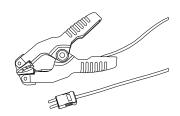

Operating Instructions

- Using the Type K sub-miniature thermocouple connector, plug the TP200 in to a compatible Type K measuring instrument.
- 2. Turn on the measuring instrument and select the appropriate range.
- Read the temperature on the measuring instrument.
 When no heat or cold is applied to the thermocouple element, the measuring instrument should display the ambient (room) temperature.

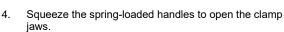

- 5. Securely clamp the probe jaws around the pipe to be measured.
- 6. Read the temperature.

Note: For best results, the surface area should be free of any dirt or substance that will inhibit thermal contact.

Specifications

Temperature Range -20 to 93°C (-4 to 200°F)

Sensor Type Type K curved thermocouple element

Accuracy +/- 1.8°C (3.6°F)

Pipe size 0.25" (6.35mm) to 1.5" (38mm) diameter

Cable length 36" (0.9m)

Copyright © 2022 FLIR Systems Inc.

All rights reserved including the right of reproduction in whole or in part in any form

ISO-9001 Certified

www.extech.com